

TABLE A-IV/2 ANNEX

EQUIPMENT OPERATION COMPETENCIES

INMARSAT STANDARD C OPERATION

COMPETENCE	LEARNING OBJECTIVE	METHODS FOR DEMONSTRATING COMPETENCE	CRITERIA FOR EVALUATING COMPETENCE
POWER UP UNIT	3.3.2	<ul style="list-style-type: none"> USE APPROVED EQUIPMENT OR GMDSS SIMULATOR 	<ul style="list-style-type: none"> UNIT IS ON AND READY FOR PROGRAMMING
DEMONSTRATE HOW TO LOG IN TO A SPECIFIC LES AND OCEAN REGION	3.3.2	<ul style="list-style-type: none"> USE APPROVED EQUIPMENT OR GMDSS SIMULATOR 	<ul style="list-style-type: none"> USE KEYBOARD TO DISPLAY THE SETUP MENU SELECT LES/CES FROM THE AVAILABLE LIST AND LOG IN
DEMONSTRATE THE ABILITY TO CREATE A NEW MESSAGE	3.3.4	<ul style="list-style-type: none"> USE APPROVED EQUIPMENT OR GMDSS SIMULATOR 	<ul style="list-style-type: none"> USING THE MAIN MENU DEMONSTRATE HOW TO CREATE A MESSAGE BY PREPARING A MESSAGE SUPPLIED BY THE EXAMINER FOR TRANSMISSION
DEMONSTRATE HOW TO SAVE A NEW MESSAGE	3.3.4	<ul style="list-style-type: none"> USE APPROVED EQUIPMENT OR GMDSS SIMULATOR 	<ul style="list-style-type: none"> USING THE INMARSAT STANDARD C TERMINAL, DEMONSTRATE HOW TO PROPERLY NAME AND SAVE A MESSAGE
DEMONSTRATE HOW TO PRINT A MESSAGE	3.3.3 3.3.4	<ul style="list-style-type: none"> USE APPROVED EQUIPMENT OR GMDSS SIMULATOR 	<ul style="list-style-type: none"> DEMONSTRATE HOW TO PREPARE THE PRINTER FOR OPERATION INCLUDING REPLACING RIBBONS AND PAPER USING THE KEYBOARD LOCATE , SELECT , AND PRINT A MESSAGE DESIGNATED BY THE EXAMINER
DEMONSTRATE HOW TO ENTER A MAIL ADDRESS INTO THE MEMORY	3.3.4	<ul style="list-style-type: none"> USE APPROVED EQUIPMENT OR GMDSS SIMULATOR 	<ul style="list-style-type: none"> DEMONSTRATE HOW TO ACCESS THE ADDRESS MENU AND ENTER AN ADDRESS NAME, DESTINATION, OCEAN REGION AND NETWORK DEMONSTRATE HOW TO SAVE THE ENTRY DEMONSTRATE HOW TO SELECT AN ADDRESS OR NAME PROVIDED BY EXAMINER FROM MEMORY

COMPETENCE	LEARNING OBJECTIVE	METHODS FOR DEMONSTRATING COMPETENCE	CRITERIA FOR EVALUATING COMPETENCE
DEMONSTRATE HOW TO SEND A TELEX MESSAGE TO	3.3.4	<ul style="list-style-type: none"> USE APPROVED EQUIPMENT OR 	<ul style="list-style-type: none"> DEMONSTRATE HOW TO ENTER THE SEND MENU AND SELECT A MESSAGE SPECIFIED BY EXAMINER

TABLE A-IV/2 ANNEX
EQUIPMENT OPERATION COMPETENCIES
INMARSAT STANDARD C OPERATION

COMPETENCE	LEARNING OBJECTIVE	METHODS FOR DEMONSTRATING COMPETENCE	CRITERIA FOR EVALUATING COMPETENCE
ANOTHER TERMINAL WITH CONFIRMATION		<ul style="list-style-type: none"> • GMDSS SIMULATOR 	TO SEND. <ul style="list-style-type: none"> • DEMONSTRATE HOW TO SELECT THE CORRECT ADDRESS • TRANSMIT THE MESSAGE WITH CONFIRMATION OPTION PROPERLY SELECTED
DEMONSTRATE THE LOGOUT OF A COAST EARTH STATION	3.3.2	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • USING THE MENU FUNCTION SELECT THE SETUP OPTION AND THEN ACCESS THE LOGIN LOGOUT FUNCTION AND DEMONSTRATE HOW TO LOG OUT
DEMONSTRATE HOW TO VIEW AND PRINT OUT THE TRANSMIT LOG	3.3.3	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • USING THE MENU FUNCTION SELECT THE LOGS MENU AND CALL UP THE TRANSMIT LOG. SELECT A MESSAGE SPECIFIED BY THE EXAMINER AND PRINT OUT A HARD COPY ON THE PRINTER.
DEMONSTRATE HOW TO VIEW AND PRINT OUT THE RECEIVE LOG	3.3.3	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • USING THE MENU SELECT THE LOGS MENU • DEMONSTRATE HOW TO DISPLAY THE RECEIVE LOG • DEMONSTRATE HOW TO LOCATE AND PRINT A SPECIFIC ENTRY OR ENTIRE LOG
DEMONSTRATE HOW TO VIEW AND PRINT OUT THE EGC LOG	3.3.3	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • USING THE MENU SELECT THE LOGS MENU • DEMONSTRATE HOW TO DISPLAY THE EGC LOG • DEMONSTRATE HOW TO LOCATE AND PRINT A SPECIFIC ENTRY OR ENTIRE LOG
DEMONSTRATE HOW TO LOCATE SHIP POSITION ON MENU SCREEN AND CONFIRM THAT THE GPS INFORMATION INPUT IS ACTIVE AND CORRECT WITHIN THE UNIT	3.3.4	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • DEMONSTRATE HOW TO LOCATE THE POSITION ON THE MENU SCREEN • INDICATE HOW THE UNIT DISPLAYS THE CURRENT GPS POSITION AND HOW TO DETERMINE IF IT IS VALID

TABLE A-IV/2 ANNEX

EQUIPMENT OPERATION COMPETENCIES

INMARSAT STANDARD C OPERATION

COMPETENCE	LEARNING OBJECTIVE	METHODS FOR DEMONSTRATING COMPETENCE	CRITERIA FOR EVALUATING COMPETENCE
DESCRIBE HOW TO SEND A DISTRESS ALERT FROM THE UNIT. IF A SIMULATOR IS AVAILABLE THEN DEMONSTRATE HOW TO SEND A DISTRESS ALERT	5.3.2	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • <u>USING A SIMULATOR OR A DUMMY LOAD</u>, SET UP AND ACTIVATE A DISTRESS ALERT
DEMONSTRATE HOW TO PREPARE A DISTRESS MESSAGE USING THE MENU SYSTEM <u>DO NOT SEND THE MESSAGE</u>	5.3.2	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • <u>USING A SIMULATOR, OR A DUMMY LOAD</u>, SET UP A DISTRESS MESSAGE USING THE MENU SYSTEM. IF A SIMULATOR IS NOT AVAILABLE THE EXAMINER SHALL ENSURE THAT THE MESSAGE <u>IS NOT TRANSMITTED</u>
DEMONSTRATE HOW TO PREPARE A POSITION REPORT	3.3.4	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • DEMONSTRATE HOW TO ENTER MENU OPTION AND INSERT ID OF RECEIVING STATION
DEMONSTRATE PROCEDURES TO MITIGATE A FALSE ALERT	5.3.2	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • DEMONSTRATE ON SIMULATOR OR DESCRIBE TO THE EXAMINER THE PROPER PROCEDURE TO USE TO MITIGATE OR CANCEL A FALSE ALERT.
DEMONSTRATE HOW TO ENABLE AND DISABLE THE UNITS POLLING FUNCTION	3.3.4	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • DEMONSTRATE HOW TO ENTER MENU OPTION AND TOGGLE YES/NO FOR POLLING
DEMONSTRATE HOW TO LOCATE A REMOTE TERMINAL IMN USING APPROPRIATE DOCUMENTATION	3.3.1	<ul style="list-style-type: none"> • USE PUBLICATIONS REQUIRED TO BE CARRIED 	<ul style="list-style-type: none"> • USING THE SATELLITE DIRECTORY DETERMINE THE PROPER SHIP IMN USING VESSEL NAME
DEMONSTRATE HOW TO VIEW THE TERMINAL'S IMN	3.3.4	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR 	<ul style="list-style-type: none"> • DEMONSTRATE HOW TO USE THE MENU OPTIONS TO DISPLAY IMN

TABLE A-IV/2 ANNEX
EQUIPMENT OPERATION COMPETENCIES
INMARSAT STANDARD C OPERATION

COMPETENCE	LEARNING OBJECTIVE	METHODS FOR DEMONSTRATING COMPETENCE	CRITERIA FOR EVALUATING COMPETENCE
FROM THE MENU		<ul style="list-style-type: none"> GMDSS SIMULATOR 	

TABLE A-IV/2 ANNEX
EQUIPMENT OPERATION COMPETENCIES
INMARSAT STANDARD C OPERATION

COMPETENCE	LEARNING OBJECTIVE	METHODS FOR DEMONSTRATING COMPETENCE	CRITERIA FOR EVALUATING COMPETENCE
DEMONSTRATE HOW TO SELECT A NAVAREA FROM THE MENU	3.3.2	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • DEMONSTRATE HOW TO USE THE MENU OPTIONS TO SELECT DESIRED NAVAREA
DEMONSTRATE HOW TO PRINT AN EGC MESSAGE FROM THE TERMINAL'S MEMORY	3.3.3	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • DEMONSTRATE HOW TO USE THE MENU OPTIONS TO PRINT THE DESIRED MESSAGE FROM THE MEMORY
ABILITY TO POWER DOWN UNIT	3.3.2	<ul style="list-style-type: none"> • USE APPROVED EQUIPMENT OR • GMDSS SIMULATOR 	<ul style="list-style-type: none"> • DEMONSTRATE ABILITY TO SECURE POWER TO UNIT INCLUDING DELAY TIMES OR SEQUENCES REQUIRED